


CONSTRUCTION

Door Mat

Task 127

Material: plastic clothesline, scissors, coping saw, old rubber hose.

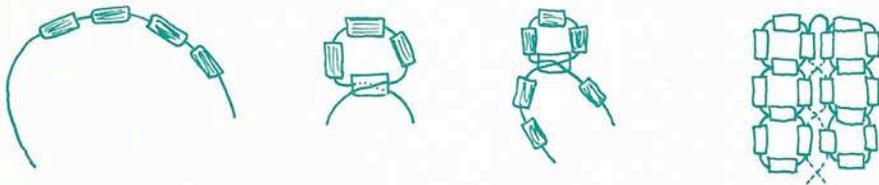

DIRECTIONS

1. Cut hose into 2 inch lengths with the coping saw.
2. Using the plastic clothesline, place four pieces of hose on line and push to center.
3. Push one end of the line thru one of the end hose pieces a second time going in opposite directions. Pull together.
4. String one piece of hose onto line and two pieces on the other side. Repeat Step 3.
5. When the door mat is the desired size, connect the rows together as shown above.