


CONSTRUCTION

Key Board

Task 118

Material: newsprint, 12"x 8" piece of 1/2" plywood, coping saw, small drill, sand paper, shellac, brush, cup hooks, felt tip pen.

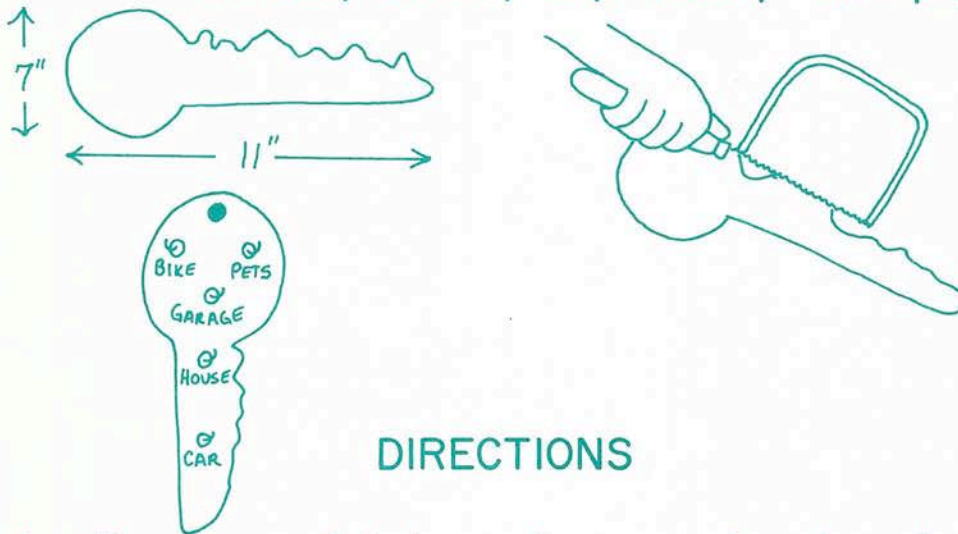

DIRECTIONS

1. Use newsprint to make your key board pattern. Cut it out and place over the plywood.
2. With the coping saw, carefully saw around the key outline.
3. Sand paper the sides and edges.
4. Decide where you will place the cuphooks. Screw them into the key board and mark with felt tip pen.
5. Bore a hole at the top of the key board for hanging.
6. Shellac and allow to dry.